


COOL BOX CONTROL SWITCH INSPECTION

1. REMOVE COOL BOX CONTROL SWITCH

Using a screwdriver, pull out the switch then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

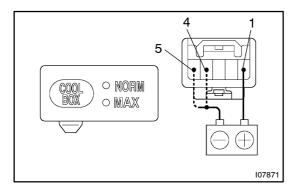


2. INSPECT COOL BOX SWITCH

(a) Inspect indicator operation.

Connect the positive lead from the battery to terminal 1 and negative (–) lead to each terminal. then check that the "NORM" and "MAX" indicators light up as shown in the chart.

Terminal	Indicator
4	NORM
5	MAX

If operation is not as specified replace the switch.

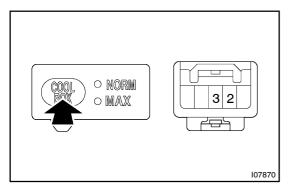

(b) Check the continuity exists between terminals 2 and 3 while switch is pressed.

If no continuity exists, replace the switch.

- 3. INSTALL COOL BOX CONTROL SWITCH
- (a) Connect the connector.
- (b) Install the switch.