


DISASSEMBLY

- 1. REMOVE REAR DRIP CHANNEL
- (a) Using a screwdriver, remove the front side of rear drip channel.

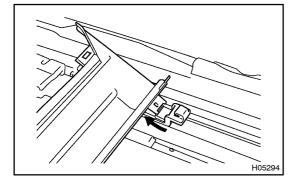


(b) Remove the rear drip channel as shown in the illustration.

2. REMOVE SLIDING ROOF PANEL STOPPER


Remove the 2 screws and 2 stoppers.

3. REMOVE SUNSHADE TRIM

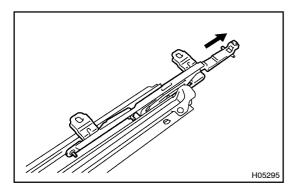


4. REMOVE DRIVE CABLE

- (a) Remove the screw and guide rail stopper.
- (b) Slide the drive cable rearward, then remove it.

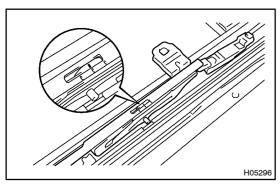


HINT:

- At the time of assembly, please refer to the following items
- Adjust the drive cable to a closed and tilted down position.
- Slide the cable forward or backward to align the 2 marks as shown.
- Slide the cable to the forefront with your hand.

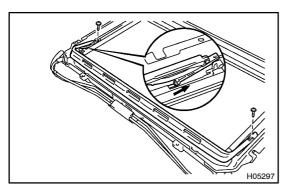


5. REMOVE WIND DEFLECTOR PANEL

Remove the 2 screws and wind deflector as shown in the illustration.

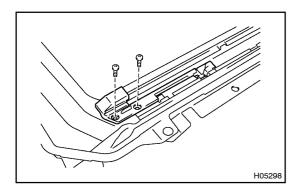

6. REMOVE GUIDE BLOCK

Remove the 2 screws and guide block.

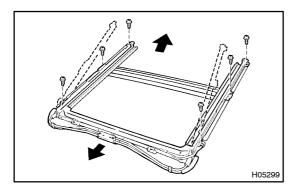

7. REMOVE SLIDING ROOF HOUSING

Remove the 6 screws and sliding roof housing.

8. REMOVE CABLE GUIDE CASING