#### BO1VK-01

# **REMOVAL**

# 1. REMOVE THESE PARTS:


(See page BO-67)


- (a) w/[High-Mount[\$top[]\_ight: Hight-mount[\$top[]ight
- (b) ☐ Back door garnish
- (c) Back door trim
- 2. REMOVE REAR WIPER ARM


(See page BO-67)



Using a knife, cut off the moulding as shown.

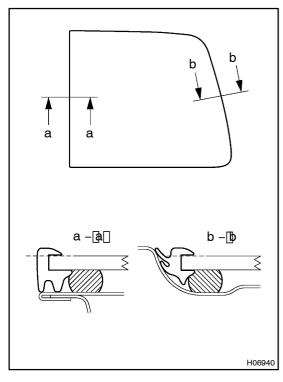

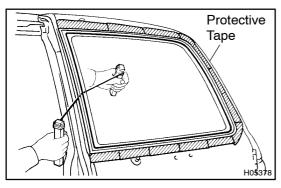

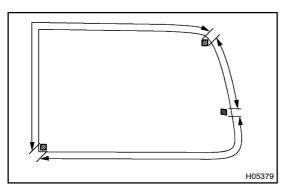

## 4. REMOVE BACK DOOR GLASS

- (a) Push piano wire through from interior.
- (b) Tie both wire ends to wooden blocks or similar object.

### HINT:

Apply protective tape to the outer surface to keep the surface from the being scratched.


### NOTICE:

When separating the glass, take care not to damage the paint and exterior.

(c) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive area as shown in the illustration, leaving the adhesive where the clips are.

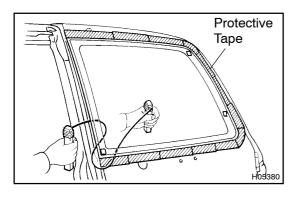

(d) Let the piano wire pass as shown in the illustration, cut off the adhered part to the clips.

# NOTICE:

Do not damage the glass retainers.

(e) Remove the glass.

# **NOTICE:**

Leave as much of the adhesive on the body as possible when cutting off the glass.