

AC22C-02

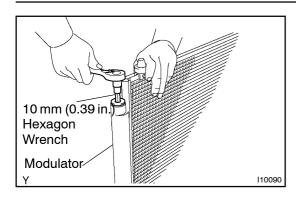


# REPLACEMENT

## REPLACE DRYER FROM MODULATOR

- (a) Using a hexagon wrench (10 mm, 0.39 in.), remove the cap from the modulator.
- (b) Remove the filter from the modulator.

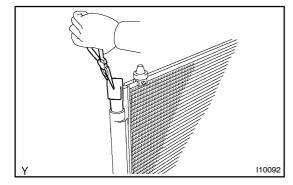


(c) Using pliers, remove the dryer.

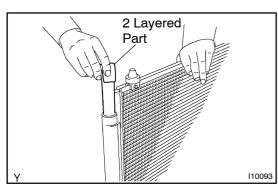

(d) Insert a new dryer into the modulator.

### **NOTICE:**


- Do not remove the dryer from a vinyl bag until inserting it into the modulator.
- Install the dryer with its 2 layered part faced upward to the modulator.

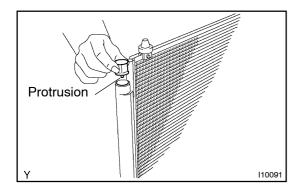

(e) Insert the filter into the modulator.

#### **NOTICE:**

Install the filter with its protrusion faced downward to the modulator.

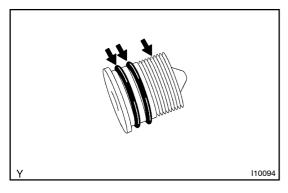

- (f) Install the cap to the modulator.
  - (1) Apply compressor oil to the O-rings and screw part of the cap.

## Compressor oil: ND-OIL 8 or equivalent

(2) Using a hexagon wrench (10 mm, 0.39 in.), install the caps.

Torque: 12.3 N·m (125 kgf·cm, 9 ft·lbf)